
Posted by [just_user](#) on Tue, 14 Feb 2006 09:07:40 GMT

[View Forum Message](#) <> [Reply to Message](#)

SATA RAID.

00:00.0 Host bridge: Intel Corporation E7320 Memory Controller Hub (rev 0c)
00:00.1 Class ff00: Intel Corporation E7320 Error Reporting Registers (rev 0c)
00:02.0 PCI bridge: Intel Corporation E7525/E7520/E7320 PCI Express Port A (rev 0c)
00:03.0 PCI bridge: Intel Corporation E7525/E7520/E7320 PCI Express Port A1 (rev 0c)
00:1c.0 PCI bridge: Intel Corporation 6300ESB 64-bit PCI-X Bridge (rev 02)
00:1d.0 USB Controller: Intel Corporation 6300ESB USB Universal Host Controller (rev 02)
00:1d.1 USB Controller: Intel Corporation 6300ESB USB Universal Host Controller (rev 02)
00:1d.4 System peripheral: Intel Corporation 6300ESB Watchdog Timer (rev 02)
00:1d.5 PIC: Intel Corporation 6300ESB I/O Advanced Programmable Interrupt Controller (rev 02)
00:1d.7 USB Controller: Intel Corporation 6300ESB USB2 Enhanced Host Controller (rev 02)
00:1e.0 PCI bridge: Intel Corporation 82801 PCI Bridge (rev 0a)

00:1f.0 ISA bridge: Intel Corporation 6300ESB LPC Interface Controller (rev 02)
00:1f.1 IDE interface: Intel Corporation 6300ESB PATA Storage Controller (rev 02)
00:1f.2 RAID bus controller: Intel Corporation 6300ESB SATA RAID Controller (rev 02)
00:1f.3 SMBus: Intel Corporation 6300ESB SMBus Controller (rev 02)
02:00.0 Ethernet controller: Marvell Technology Group Ltd. 88E8050 Gigabit Ethernet Controller (rev 18)
04:02.0 VGA compatible controller: ATI Technologies Inc Rage XL (rev 27)
04:03.0 Ethernet controller: Intel Corporation 82541GI/PI Gigabit Ethernet Controller (rev 05)
