

---

Subject: Re: 3ware + Linux 2.6.26-2-openvz-amd64 kernel  
Posted by [jamesdean-dean-57](#) on Thu, 09 Sep 2010 15:34:53 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

thanks for your help !

```
# tw_cli show
```

```
Ctl  Model      (V)Ports  Drives  Units  NotOpt  RRate  VRate  BBU
-----
c0   9650SE-4LPML 4        4        1       0       3       3       -
```

```
# tw_cli show version
```

```
CLI Version = 2.00.11.006
```

```
API Version = 2.08.00.006
```

```
# tw_cli /c0 show all
```

```
/c0 Driver Version = 2.26.02.010
```

```
/c0 Model = 9650SE-4LPML
```

```
/c0 Available Memory = 224MB
```

```
/c0 Firmware Version = FE9X 4.10.00.007
```

```
/c0 Bios Version = BE9X 4.08.00.002
```

```
/c0 Boot Loader Version = BL9X 3.08.00.001
```

```
/c0 Serial Number = L326010A9501855
```

```
/c0 PCB Version = Rev 035
```

```
/c0 PCHIP Version = 2.00
```

```
/c0 ACHIP Version = 1.90
```

```
/c0 Number of Ports = 4
```

```
/c0 Number of Drives = 4
```

```
/c0 Number of Units = 1
```

```
/c0 Total Optimal Units = 1
```

```
/c0 Not Optimal Units = 0
```

```
/c0 JBOD Export Policy = off
```

```
/c0 Disk Spinup Policy = 1
```

```
/c0 Spinup Stagger Time Policy (sec) = 1
```

```
/c0 Auto-Carving Policy = off
```

```
/c0 Auto-Carving Size = 2048 GB
```

```
/c0 Auto-Rebuild Policy = on
```

```
/c0 Rebuild Mode = Adaptive
```

```
/c0 Rebuild Rate = 3
```

```
/c0 Verify Mode = Adaptive
```

```
/c0 Verify Rate = 3
```

```
/c0 Controller Bus Type = PCIe
```

```
/c0 Controller Bus Width = 4 lanes
```

```
/c0 Controller Bus Speed = 2.5 Gbps/lane
```

Unit	UnitType	Status	%RCmpl	%V/I/M	Stripe	Size(GB)	Cache	AVrfy
u0	RAID-5	OK	-	-	256K	1396.95	RiW	ON

VPort	Status	Unit	Size	Type	Phy	Encl-Slot	Model
p0	OK	u0	465.76 GB	SATA	0	-	ST3500320NS
p1	OK	u0	465.76 GB	SATA	1	-	ST3500320NS
p2	OK	u0	465.76 GB	SATA	2	-	ST3500320NS
p3	OK	u0	465.76 GB	SATA	3	-	ST3500320NS

---