

---

Subject: Re: development kernel can not boot

Posted by [Stef](#) on Wed, 28 Jun 2006 11:48:20 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sorry i forgot...

```
[root@wevhl001 ~]# lspci
```

```
00:00.0 Host bridge: Intel Corporation E7520 Memory Controller Hub (rev 09)
00:02.0 PCI bridge: Intel Corporation E7525/E7520/E7320 PCI Express Port A (rev 09)
00:04.0 PCI bridge: Intel Corporation E7525/E7520 PCI Express Port B (rev 09)
00:06.0 PCI bridge: Intel Corporation E7520 PCI Express Port C (rev 09)
00:1d.0 USB Controller: Intel Corporation 82801EB/ER (ICH5/ICH5R) USB UHCI Controller #1
(rev 02)
00:1d.1 USB Controller: Intel Corporation 82801EB/ER (ICH5/ICH5R) USB UHCI Controller #2
(rev 02)
00:1d.7 USB Controller: Intel Corporation 82801EB/ER (ICH5/ICH5R) USB2 EHCI Controller (rev
02)
00:1e.0 PCI bridge: Intel Corporation 82801 PCI Bridge (rev c2)
00:1f.0 ISA bridge: Intel Corporation 82801EB/ER (ICH5/ICH5R) LPC Interface Bridge (rev 02)
03:00.0 PCI bridge: Intel Corporation 6700PXH PCI Express-to-PCI Bridge A (rev 09)
03:00.1 PIC: Intel Corporation 6700/6702PXH I/OxAPIC Interrupt Controller A (rev 09)
03:00.2 PCI bridge: Intel Corporation 6700PXH PCI Express-to-PCI Bridge B (rev 09)
03:00.3 PIC: Intel Corporation 6700PXH I/OxAPIC Interrupt Controller B (rev 09)
04:04.0 SCSI storage controller: LSI Logic / Symbios Logic 53c1030 PCI-X Fusion-MPT Dual
Ultra320 SCSI (rev 08)
05:04.0 Ethernet controller: Intel Corporation 82546GB Gigabit Ethernet Controller (rev 03)
05:04.1 Ethernet controller: Intel Corporation 82546GB Gigabit Ethernet Controller (rev 03)
06:0d.0 VGA compatible controller: ATI Technologies Inc Radeon RV100 QY [Radeon 7000/VE]
```

```
[root@wevhl001 ~]# lspci -n
```

```
00:00.0 Class 0600: 8086:3590 (rev 09)
00:02.0 Class 0604: 8086:3595 (rev 09)
00:04.0 Class 0604: 8086:3597 (rev 09)
00:06.0 Class 0604: 8086:3599 (rev 09)
00:1d.0 Class 0c03: 8086:24d2 (rev 02)
00:1d.1 Class 0c03: 8086:24d4 (rev 02)
00:1d.7 Class 0c03: 8086:24dd (rev 02)
00:1e.0 Class 0604: 8086:244e (rev c2)
00:1f.0 Class 0601: 8086:24d0 (rev 02)
03:00.0 Class 0604: 8086:0329 (rev 09)
03:00.1 Class 0800: 8086:0326 (rev 09)
03:00.2 Class 0604: 8086:032a (rev 09)
03:00.3 Class 0800: 8086:0327 (rev 09)
04:04.0 Class 0100: 1000:0030 (rev 08)
05:04.0 Class 0200: 8086:107b (rev 03)
05:04.1 Class 0200: 8086:107b (rev 03)
06:0d.0 Class 0300: 1002:5159
```

Do you need our initrd images too?

Thanks!  
Stef

---