

---

Subject: Re: Hardware Drivers

Posted by [tiggerific](#) on Thu, 07 Sep 2006 07:25:48 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Um... I dunno

Told you hardware wasn't my thing.

lspci:

```
[root@server etc]# lspci
```

```
00:00.0 Host bridge: Intel Corporation 82845 845 (Brookdale) Chipset Host Bridge (rev 03)
```

```
00:01.0 PCI bridge: Intel Corporation 82845 845 (Brookdale) Chipset AGP Bridge (rev 03)
```

```
00:1e.0 PCI bridge: Intel Corporation 82801 PCI Bridge (rev 12)
```

```
00:1f.0 ISA bridge: Intel Corporation 82801BA ISA Bridge (LPC) (rev 12)
```

```
00:1f.1 IDE interface: Intel Corporation 82801BA IDE U100 (rev 12)
```

```
00:1f.3 SMBus: Intel Corporation 82801BA/BAM SMBus (rev 12)
```

```
02:00.0 VGA compatible controller: S3 Inc. 86c764/765 [Trio32/64/64V+]
```

```
02:01.0 Ethernet controller: Realtek Semiconductor Co., Ltd. RTL-8139/8139C/8139C+ (rev 10)
```

lapci:

```
[root@server etc]# lapci -n
```

```
-bash: lapci: command not found
```

Kernel I'm "trying" to load is:

```
vmlinuz-2.6.8-022stab078.14-smp
```

Thanks again.

---