

---

Subject: Bus Error Help!?

Posted by [hauntmisery](#) on Sun, 11 Jun 2006 03:16:28 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

```
[root@localhost ~]# vzctl destroy 101
Bus error
```

what dose this error mean?

---

---

Subject: Re: Bus Error Help!?

Posted by [Vasily Tarasov](#) on Sun, 11 Jun 2006 07:27:30 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Are there any messages in /var/log/messages?

What kernel do you use?

And also what hardware is on your node?

Thanks.

---

---

Subject: Re: Bus Error Help!?

Posted by [hauntmisery](#) on Sun, 11 Jun 2006 07:34:18 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

```
Jun 11 02:38:51 localhost kernel: hda: dma_intr: status=0x51 { DriveReady SeekComplete Error }
```

```
Jun 11 02:38:51 localhost kernel: hda: dma_intr: error=0x40 { UncorrectableError },
```

```
LBAsect=31435747, sector=31435741
```

```
Jun 11 02:38:51 localhost kernel: end_request: I/O error, dev hda, sector 31435741
```

```
Jun 11 02:38:55 localhost kernel: hda: dma_intr: status=0x51 { DriveReady SeekComplete Error }
```

```
Jun 11 02:38:55 localhost kernel: hda: dma_intr: error=0x40 { UncorrectableError },
```

```
LBAsect=31435747, sector=31435741
```

```
Jun 11 02:38:55 localhost kernel: end_request: I/O error, dev hda, sector 31435741
```

---

---

Subject: Re: Bus Error Help!?

Posted by [Vasily Tarasov](#) on Sun, 11 Jun 2006 08:04:08 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Seems that kernel can't load some pages from swap due to some I/O errors...

Is this error permanent? I mean you can't destroy VPS even after reboot?

Thanks for information.

---

---

Subject: Re: Bus Error Help!?

Posted by [Vasily Tarasov](#) on Sun, 11 Jun 2006 08:31:49 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Please, try the following items to solve the problem:

Check that your disk works in right DMA mode.

Check your disk for bad blocks.

---

Subject: Re: Bus Error Help!?

Posted by [scythe](#) on Sun, 11 Jun 2006 10:51:46 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Try compiling

`CONFIG_IDEDISK_MULTI_MODE = y`

into your running kernel. That should do the trick if it doesn't contain bad blocks.

---